




# OIL QUALITY

## TEST STRIPS

EASY - INSTANT - ACCURATE

Testing Range:  
0-0.3-0.5-1.5-2.5-3.0-5.0  
(A.V.)/(KOH)mg/g

100 Strips

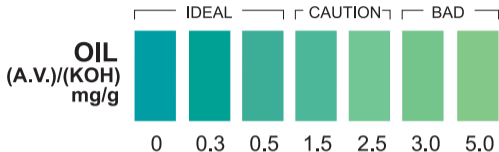

### HOW TO TEST YOUR OIL QUALITY

1. Immerse test strip into cold oil (50-86°F/10-30°C) for 2 seconds and then remove the strip.
2. Hold the strip horizontally for 120 seconds.
3. Compare against the color chart and read immediately within 30 seconds to get accurate result.

### IMPORTANT:

- ◆ Keep wet fingers out of the bottle.
- ◆ Avoid touching or polluting the test area of strip.
- ◆ Seal the bottle tightly after removing strips.
- ◆ For best results read in natural light.
- ◆ Store in a cool dry place.